
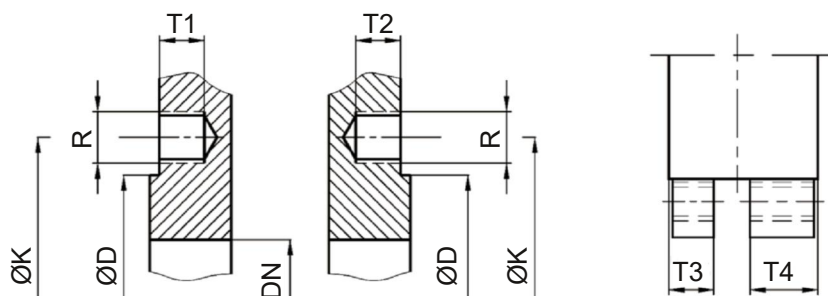


Flänstabel MU

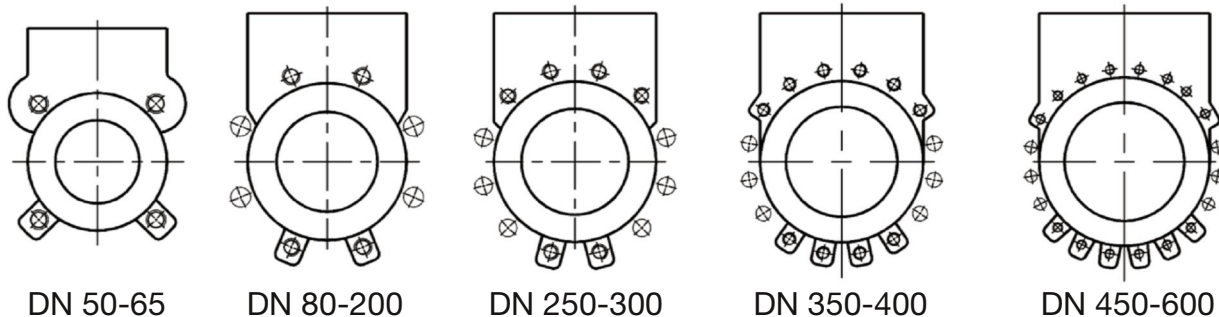

Dimensioner PN10

DN	ØK	ØD	Antal gängade hål	Antal genomgående hål	Antal flänshål	T1	T2	T3	T4	R
50	125	95	4	-	4	9	10	37	-	M16
65	145	105	4	-	4	10	10	38	-	M16
80	160	135	4	4	8	7	9	16	19	M16
100	180	158	4	4	8	7	11	17	23	M16
125	210	188	4	4	8	7	17	15	27	M16
150	240	212	4	4	8	11	12	20	22	M20
200	295	268	4	4	8	13	15	21	24	M20
250	350	320	6	6	12	13	16	28	29	M20
300	400	370	6	6	12	16	23	29	38	M20
350	460	410	10	6	16	21	21	24	24	M20
400	515	465	10	6	16	21	21	26	26	M24
450	565	520	14	6	20	22	22	26	26	M24
500	620	566	14	6	20	22	22	28	28	M24
600	725	672	14	6	20	22	22	28	28	M27

Dimensioner PN16

DN	K	D	Antal gängade hål	Antal genomgående hål	Antal flänshål	T1	T2	T3	T4	R
50	125	95	4	-	4	9	10	37	-	M16
65	145	105	4	-	4	10	10	38	-	M16
80	160	135	4	4	8	7	9	16	19	M16
100	180	158	4	4	8	7	11	17	23	M16
125	210	188	4	4	8	7	17	15	27	M16
150	240	212	4	4	8	11	12	20	22	M20
200	295	268	6	6	12	13	15	21	24	M20
250	355	320	6	6	12	13	16	28	29	M24
300	410	370	6	6	12	16	23	29	38	M24
350	470	410	10	6	16	21	21	24	24	M24
400	525	465	10	6	16	21	21	26	26	M27
450	585	520	14	6	20	22	22	26	26	M27
500	650	566	14	6	20	22	22	28	28	M30
600	770	672	14	6	20	22	22	28	28	M33